SPORTCRUISER

Emergency Quick Reference



EMERGENCY LANDING

V	V	IT	Ή	O	U	т	F	N	GI	N	F	P	O	Λ	/EI	R

	If above 1500' AGL	
Squawk	7700	

Emergency DECLARE on 121.5

All altitudes

Seatbelts SECURE
Throttle IDLE
Fuel Pump OFF
Fuel Selector OFF
Magnetos OFF

Landing assured

Flaps AS REQD

Panel Switches ALL OFF

Canopy UNLOCK IN GROUND EFFECT

BRS should be used if unable safe landing

ENGINE FAILURE AFTER TAKEOFF

Airspeed	60
Flaps	AS REQD
Fuel Selctor	OFF
Ignition	OFF
Master BAT/GEN	OFF
Land	STRAIGHT AHEAD

ENGINE FAILURE IN FLIGHT

Airspeed	60
Best Place to Land	SELECT
Fuel Pump	ON
Fuel Selector	FULLEST/SWITCH
Ignition	CHECK
Throttle	IDLE
Choke	ON/OFF
Carb Heat	ON/OFF
Ignition	START

If Power Restored

Cruise Checklist COMPLETE

If Power NOT Restored

Emergency Landing EXECUTE

ELECTRICAL FIRE IN FLIGHT

Panel Switches	OFF
Leave Ignition	on switch ON
Cabin Heater	OFF
Vents	OPEN
Fire	EXTINGUISH
Emergency Descent	IF NEEDED

Land as soon as practical

EN	CIN	16 EI	DE D	LIDIN	C 67	CADT
EN	GIN		KE U	UKIN	6 5	TART

Fuel Selector	OFF		
Throttle	OPEN		
Ignition	OFF		
Master BAT/GEN	OFF		
Master BAT/GEN Aircraft	OFF ABANDON		

ENGINE FIRE IN FLIGHT

_				
Fuel Selector	OFF			
Throttle	OPEN			
Cabin Heater	OFF			
Ignition	OFF			
Autopilot	OFF			
Airspeed	PITCH FOR Vno			
If fire extinguished				

If fire extinguished

Emergency Landing EXECUTE

GENERATOR FAILURE

Autopilot	OFF
Master BAT/GEN	ON
Throttle	ABOVE 3000 RPM
Master BAT/GEN	OFF THEN ON
Alternator	OFF
If alternate	or still failed
Master GEN	OFF
Unnecessary Equip	OFF
Voltmeter	MONITOR
Land	WHEN PRACTICAL

BRS ACTIVATION

Only if plane is uncontrollable or landing on inhospitable terrain

Airspeed	UNDER 120 KIAS
Ignition	OFF
Fuel Selector	OFF
Master BAT/GEN	OFF
BRS Handle	PULL (hard, continuous)
Seatbelts	TIGHTEN
Brace Position	ASSUME

SPORTCRUISER

LOST COMMUNICATIONS

Radio VERIFY FREQ

Volume/Squelch ADJUST

Push To Talk VERIFY TX

Comms CYCLE COM/FREQ

If Comms not re-established

Squawk 7600

Land WHEN PRACTICAL

Recall light gun signals

OPEN CANOPY IN FLIGHT

DO NOT try to close the Canopy

Airspeed UNDER 75 KIAS

Throttle AS REQD

Land WHEN PRACTICAL

DO NOT perform slipping maneuver

DEPARTURE BRIEF

ABORTED TAKEOFF

Abort takeoff for any fires, red annunciators or loss of directional control.

ENGINE FAILURE BELOW 1000 AGL

Pitch for VG and land on remaining runway or within 30 degrees of heading.

ENGINE FAILURE ABOVE 1000 AGL OR TURNED CROSSWIND

Pitch for VG and return to land on runway, taxiway, or suitable off-field site.

BEFORE TAXI BRIEF

LSA

This aircraft was manufactured in accordance with Light Sport Aircraft airworthiness standards and does not conform to standard category airworthiness requirements.

BRS

This aircraft is equipped with a Ballistic Recovery System, or Parchute, which will only be used in the event that the pilot becomes incapacitated. In order to use it, the airplane must be under 120 knots, at least 200 ft AGL, and the propeller must be stopped. You would then pull the red handle with a minimum of 30lbs force continuously, tighten your safety harness and assume the brace position.

SAFETY

SEATBELTS

Location, function, & when to wear

AIR VENTS

Location, function, motion sickness

FIRE

Fire extinguisher location and use

EMERGENCY

Follow my instructions. Exit procedures

TALKING

Sterile cockpit & exchange of controls

YOUR QUESTIONS

questions from passengers

FUEL SELECTOR

The fuel selector is located here (point) The positions are:

Right Tank	Pointing Right
Left Tank	Pointing Left
Off	Pointing Aft

The only time we will use the "OFF" position is in an emergency. To turn off, lift the middle pin, then turn the fuel selector to the rear. I will not pull the pin during normal tank switches.